



QUICK USER GUIDE

En

!!! Please refer to our website: www.geemarc.com for an up to date user guide, as there may be important updates and changes you need to be aware of !!!

CAUTION : Use only the battery provided. There may be a risk of explosion if a wrong type of battery is used for the parent unit. The battery cannot be subjected to high or low extreme temperature and low air pressure at high altitude during use, storage or transportation. Disposal of battery into fire or a hot oven, or mechanically crushing or cutting or the battery can result in an explosion. Leaving the battery in an extremely high temperature surrounding environment can result in an explosion or the leakage of flammable liquid of gas. Battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas. Dispose of used battery according to the instructions.

Normal operating temperature for the product (e.g. 0 °C ~ 40°C).
Use only the adapters and battery listed below.


Power adapter information: output: 6V DC 0.6A, 3.6W.
Ten Pao. Model: S005BNV0600060(EU), S005BNB0600060(UK)

Rechargeable Battery: Model: KH-AAAJ600-D x 3pcs.
1.2V DC, 600mAh. Corun.

PACKAGE CONTENTS

1 Telephone base, 1 cordless Handset, 1 power adapter, 1 Telephone line cord, 3 NiMh batteries, 1 Quick user guide.


Base / Handset

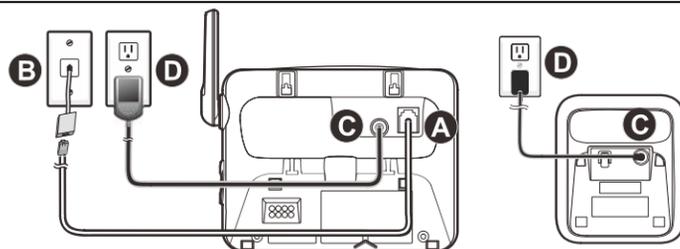

1

2

Connection base

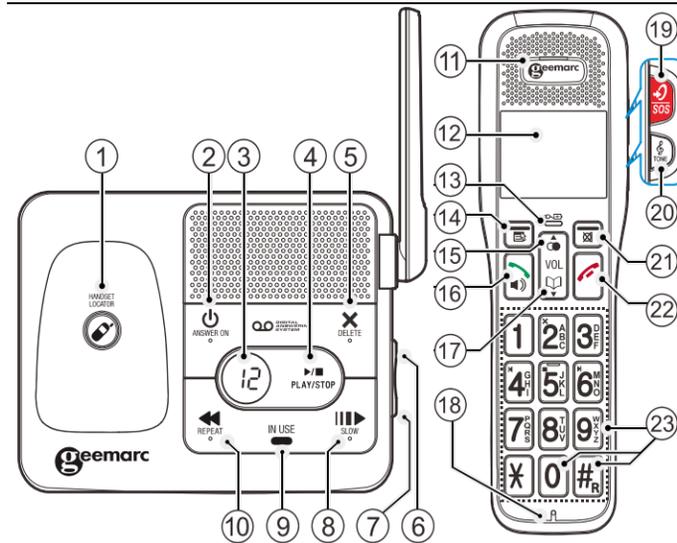

INSTALLATION

Connecting the telephone

Connect the telephone cable to the telephone line socket (A) and to the telephone wall socket (B).

Connect the power adapter jack to the base (C) then connect the power adapter plug to the mains power (D).

Note: Use only the power adapters supplied with the phone.

Connecting the battery

Slide the battery cover downwards.

Install the 3 batteries into the socket as indicated, matching correct polarity (+,-).

Align the cover flat against the battery compartment, and then slide it upwards until it clicks into place.

Charging the batteries

Charge the batteries for at least 16 hours when charging for the first time.

OVERVIEW

Base

1. /HANDSET LOCATOR

While the phone is idle, press to page all handsets.

2. /ANS ON

Press to turn the built-in answering system on or off.
The system will flash to show that there is a new message.

3. MESSAGE COUNTER

Display the number of messages recorded.

4. /PLAY/STOP : Press to start or stop message playback.

5. /DELETE

Press to delete the message currently playing.
Long press to delete all old messages when the phone is not in use.

6. VOL ()

During message playback, press to increase the listening volume.
While in idle mode, press to increase the base ringer volume.

7. VOL ()

During message playback, press to decrease the listening volume.
While in idle mode, press to decrease the base ringer volume.

8. /SLOW

During message playback, press the key to slow the listening speed.

9. IN USE

ON when handsets are in use, or when the answering system is answering an incoming call.

10. /REPEAT

During message playback, press to repeat a message.
Press twice to play the previous message.

Handset

11. EARPIECE

12. LCD DISPLAY

13. CHARGE LIGHT ()

Continuously on when the handset is charging in the charger.

14. MENU/OK ()

In idle mode: Press to access the main menu.

In sub-menu mode: Press to confirm the selection.

During a call: Press to access Intercom /Phonebook /Redial list /Call log.

15. UP/CALL LIST ()

In idle mode: Press to access the redial list.

In menu mode: Press to scroll up the menu items.

In phonebook list/redial list/call list: Press to scroll up the list.

In editing mode: Press to move the cursor one character to the left.

During a call: Press to increase the listening volume.

During ringing: Press to increase the ringer volume.

16. TALK ON () SPEAKERPHONE ()

In idle/pre-dial mode: Press to make a call in earpiece mode.

In phonebook/redial list /call list: Press to make a call to the selected entry in the list in earpiece mode.

During ringing: Press to answer a call in earpiece mode.

On line: Press again to pass in speakerphone mode. Press again to switch to earpiece mode.

17. DOWN/PHONEBOOK ()

In idle mode: Press to access the phonebook.

In menu mode: Press to scroll down the menu items.

In phonebook list/redial list/call list: Press to scroll down the list.

In editing mode: Press to move the cursor one character to the right.

During a call: Press to decrease the listening volume.

During ringing: Press to decrease the ringer volume.

18. MICROPHONE

19. VOLUME BOOST/SOS (/SOS)

During a call: Press to activate/deactivate the VOLUME BOOST function.

In idle mode: Press and hold for 3 seconds to enter the emergency calling sequence set in your handset.

In call mode: press and hold for 2 seconds to stop the emergency call.

20. TONE

During a call: press this key to increase the high frequency or the low frequencies.

21. CANCEL/MUTE ()

In main menu mode: Press to go back to idle screen.

In sub-menu mode: Press to go back to previous menu.

In editing/pre-dial mode: Press to delete a character/digit.

In editing/pre-dial mode: Press and hold to delete all the characters / digits.

During a call: Press to mute/resume the microphone.

During ringing: Press to silence the handset ringer.

In idle mode: Press to intercom another handset.

22. TALK OFF ()

During a call: Press to end a call and go back to idle screen.

In menu/editing mode: Press to go back to idle screen.

23. ALPHANUMERIC KEYPAD, STAR (*), HASH (#), R (#R)

In pre-dial or editing mode: Press to insert a digit / character / * / #.

#R during a call: Press and hold to make a Flash (Recall).

0 key in idle/pre-dial mode/number editing mode: Press and hold to insert a pause.

FIRST USE OF YOUR HANDSET

After you have inserted the batteries, the display asks you to select your language with the keys (15/17), Press **MENU/OK** (14) to valid, then enter the date with the keypad and validate by pressing **MENU/OK** (14).

Enter the correct hour with the keypad and validate by pressing **MENU/OK** (14).

MENU SETTING

The phone settings are always set in the same manner:

Press **MENU/OK** (14) button to open the main menu. Then use the buttons to select an entry and confirm it by pressing the **MENU/OK** (14) button.

Handset

CALL LOG

VIEW LIST

Under entry: DETAILS **▶** ADD TO PB **▶** ADD TO BL **▶** ADD TO PM **▶** DELETE **▶** DELETE ALL

PHOTO MEM: M1 to M4

PHONEBOOK

▶ ALL **▶ SPEED DIAL **▶** VIP**

Under entry: **▶** ADD **▶** VIEW **▶** EDIT **▶** DELETE **▶** DELETE ALL **▶** ADD VIP **▶** ADD TO PM **▶** ADD TO SD **▶** STATUS

CALL BLOCK

BLACK LIST (under entry: **▶** ADD **▶** VIEW **▶** EDIT **▶** DELETE **▶** DELETE ALL **▶** ADD TO PM **▶** STATUS) **▶** SETTING (BLOCK MODE **▶** W/O NUM)

INTERCOM: **▶** HANDSET* **▶** BASE **▶** ALL

BS SETTINGS

▶ BS RINGER **▶** RING VOLUME **▶** FLASH TIME **▶** FIRST RING

HS SETTINGS

▶ RING SETUP **▶** TONE SETUP **▶** AUTO BOOST **▶** TEXT LANG **▶** DATE & TIME **▶** REGISTER **▶** DEFAULT

SET SOS: SOS NUMBER **▶** SOS MSG **▶** SOS LANGUAGE

REMINDER

▶ ON/OFF (ALARM 1 TO 10)

▶ (ONCE/DAILY/MON-FRI/SAT-SUN)

TLK DIGITS: **▶** ON **▶** OFF

ANS. SYS.

▶ PLAYBACK **▶** DEL OLD **▶** MEMO **▶** TAM ON/OFF

▶ SET TAM (TAM LANG **▶** CALLSCREEN, TAM MSG, ANS. DELAY, RECORD TIME, REMOTE ACC, CHANGE PIN **▶** MSG ALERT)

SET DEVICE : CHECK SIGNAL **▶** DOORBELL

DEVICES : DOORBELL **▶** ALERTER (STATUS) **▶** LOG **▶** RENAME

HANDSET REGISTRATION

Note: Handset and base station are pre-registered.

Up to four handsets can be registered to a single base station.

Registering a handset

On **Base:** press and hold /HANDSET LOCATOR(1) on the base until you hear a beep to enter the registration mode.

At the same time On **Handset:** Press **MENU/OK** (14) Use (15/17) to select **HS SETTING** and Press **MENU/OK** (14).

Use (15/17) to select **REGISTER**, Press **MENU/OK** (14) and **REGISTERING** will be displayed.

After a short delay, if the registration is successful, there will be a confirmation beep, and the handset display will go back to idle mode with the new handset number shown. The base display will also go back to idle mode.

INTERCOM

See the user guide of the additional handset

ADDITIONAL DEVICES

You can also register up to 4 handsets, 3 doorbells and several alerters on the AD595 U.L.E. All the devices are connected/registered in factory, if these are included in the package, no need to register any device.

If you should pair one doorbell or alerter, please read the user guide of your device.

SET DEVICE

Press **MENU/OK** (14) and to select **SET DEVICES**.

CHECK SIGNAL:

DOORBELL: Press **MENU/OK** (14) and on the doorbell button to check the quality of the signal.

ALERTER: Press **MENU/OK** (14) to check the quality of the signal.

DOORBELL:

This function is to set:

CHIME: In this function, you can set the doorbell melody and volume when you press the doorbell button.

3

4

RECORD?: Set ON to record the conversation with the doorbell.

DBELL DVRT :

This function allows you to transfer the doorbell alert at one phone number set in manual or automatic.

DVRT MODE: allows to activate the function in manual, automatic or OFF.

PRESET NUM: allows you to enter the phone number for transfer.

DEVICES

In this menu, you can check :

Press **MENU/OK**  and **▲/▼** to select **DEVICES**.

STATUS: This function will let you know if the device is connected.

LOG: This function is to display the doorbell list action

RENAME: This function is to change the name of your device

PHONEBOOK

Your phone can store up to 50 private phonebooks in the cordless handset with names and numbers. Each phonebook entry can have a maximum of 20 digits for the phone number and 10 characters for the name.

Phonebook entries are stored alphabetically by name.

To Add new entry

In idle mode:

Press **MENU/OK**  (14) and **▼/▲** (15/17) to select **PHONEBOOK** and press **MENU/OK**  to access the phonebook list (or empty).

Press **MENU/OK**  2 times to select **ADD**.

Press **MENU/OK**  to select **NUMBER**, enter number.

Press **MENU/OK**  to select **NAME**, enter the name.

Press **MENU/OK**  to save.

SOS EMERGENCY CALL

SOS Settings

You need to set the SOS numbers before you can make SOS emergency calls.

In idle mode:

Press **MENU/OK**  and **▲/▼** to select **SET SOS**.

Press **MENU/OK**  and **▲/▼** to select **SOS NUMBER**.

Press **MENU/OK**  and **▲/▼** to select the SOS number to edit (**SOS 1**, **SOS 2**, **SOS 3** or **SOS 4**).

Press **MENU/OK**  and select **ADD** to enter a new number or **EDIT** to modify the number stored already.

Press **MENU/OK**  and enter a new name or edit the name stored already.

Press **MENU/OK**  to confirm or **CANCEL/MUTE**  to delete.

Make SOS Emergency Calls

Press and hold 3 seconds SOS key on the handset to enter the emergency calling sequence from the **SOS 1** number to **SOS 4** number. A call will be first dialed to the **SOS 1** number. If the **SOS 1** number does not answer in 60 seconds, the call be will made to the **SOS 2** number, and so on.

Note: The other party receiving the SOS message must press any number on their phone to open the SOS call. Thereafter by pressing any number on their phone every two minutes will keep the emergency call open unless the phone stops the call 10 seconds after.

Record SOS Messages

You can record your customized SOS message to be played when you dial out an SOS emergency call otherwise the default message will be played.

Press **MENU/OK**  and **▼/▲** to select **SET SOS**.

Press **MENU/OK**  and **▲/▼** to select **SOS MSG**.

Press **MENU/OK**  and **▼/▲** to select **RECORD**.

Press **MENU/OK**  to start SOS message recording and "RECORDING" will be displayed.

Press **MENU/OK**  to save your SOS message.

Play SOS Messages

Press **MENU/OK**  and **▲/▼** to select **SET SOS**.

Press **MENU/OK**  and **▲/▼** to select **SOS MSG**.

Press **MENU/OK**  to show **PLAY**.

Press **MENU/OK**  to start SOS message playback.

Press **5 key** to stop SOS message playback.

SET SPEED DIAL KEYS IN HANDSET (KEYS 1 TO 9)

In idle mode:

Press **MENU/OK**  and **▲/▼** to select **PHONEBOOK**.

Press **MENU/OK**  and **▲/▼** to select **SPEED DIAL**.

Press **LEFT SOFTKEY**, use. **▲/▼** to select the speed dial key.

Press **MENU/OK**  , select **ADD** or **EDIT**.

Press **MENU/OK**  and enter the phone number.

Press **MENU/OK**  to enter the NAME.

Press **MENU/OK**  to confirm.

To use one speed dial key, **press and hold** in idle mode the key between 1 to 9 for 3 seconds (you hear a beep of confirmation).

PICTURE BIG BUTTON MEMORIES

Function available only on the Combi Dect 595

FUNCTION BLACK LIST

You can block 20 phone numbers. For this, you must complete the black list number.

In idle mode:

Press **MENU/OK**  and **▲/▼** to select **CALL BLOCK**.

Press **MENU/OK**  and **▲/▼** to select **BLACK LIST**.

Press **MENU/OK**  2 times and select **ADD** or **EDIT**.

Press **MENU/OK**  and enter the phone number.

Press **MENU/OK**  to enter the NAME.

Press **MENU/OK**  to confirm.

ANSWERING MACHINE

Your telephone base includes a telephone answering machine that records unanswered calls when it is on. The answering machine can store up to 59 messages within the maximum recording time of approximately 30 minutes. As well as recording incoming messages, you can record memos for other users of your phone.

Switching Answering Machine On/Off

In idle mode:

1. Press **MENU/OK**  and **▼/▲** to select **ANS.SYS**.

2. Press **MENU/OK**  and **▼/▲** to select **TAM ON / OFF**.

3. Press **MENU/OK**  and **▼/▲** to select **ON** or **OFF**.

4. Press **MENU/OK**  to confirm.

Play Messages on TAM

If you have new messages, the display will show e.g.2 NEW MESSAGE, which means you have 2 new messages. The new messages are played first, and then are saved as old messages, until they are deleted. Old messages are played again after all new messages are played completely.

In idle mode:

1) Press **MENU/OK**  and **▼/▲** to select **ANS. SYS**.

2) Press **MENU/OK**  to show **PLAYBACK**.

3) Press **MENU/OK**  again to start message playback and the screen displays the date and hour of the message received.

4) During message playback, press **▼/▲** to adjust the message playback volume respectively.

NOTE: After new message is played, the new message will be saved as an old message automatically unless it is deleted.

5) Press **LEFT SOFTKEY**  and **▼/▲** to select **STOP, FORWARD, PREVIOUS** or **DELETE** to perform the following functions during message playback.

- **STOP:** Stop the current message playback and return to the ANS. MACHINE menu.

- **FORWARD:** Skip to play the next message. The date and hour information of the next message will display if there is next message.

- **PREVIOUS:** Skip to repeat playing the current message from the beginning. The date and hour information of the current message will display.

- **DELETE:** Delete the current message and the next message will be played.

6) Press **MENU/OK**  to confirm the setting.

Set the Answer Delay

You can set the number of rings before the answering machine answers and starts playing your OGM. You can set the answering machine to answer after two to eight rings or TIME SAVER.

The TIME SAVER function answers calls after 6 ring signals, until the first new message has been registered - then the answering machine

switches to answering after approximately 2 signals. This is useful when using remote access; if you call up the answering machine and there is no reply after four rings it means there are no messages recorded and you can hang up before you are charged for the call.

In idle mode:

1) Press **MENU/OK**  and **▼/▲** to select **ANS. SYS**.

2) Press **MENU/OK**  and **▼/▲** to select **SET TAM**.

3) Press **MENU/OK**  and **▼/▲** to select **ANSWER DELAY** (Available options: **2 RINGS, 4 RINGS, 6 RINGS, 8 RINGS, 10 RINGS** or **TOLL SAVE**).

4) Press **MENU/OK**  to confirm.

Function Message Alert

When you have a new message, you can hear a beep every 10 seconds. If you want deactivate this beep, follow the procedure.

In idle mode:

1) Press **MENU/OK**  and **▼/▲** to select **ANS. SYS**.

2) Press **MENU/OK**  and **▼/▲** to select **SET TAM**.

3) Press **MENU/OK**  and **▼/▲** to select **MSG ALERT**.

4) Press **MENU/OK**  and **▼/▲** to select **OFF**.

5) Press **MENU/OK**  to confirm.

REMOTE OPERATIONS

If you are away from your home, you can call your answering machine to switch on or off the answering machine and listen to your messages remotely using another tone-dialing phone.

1) Place a call from a tone-dialing phone.

2) When the answering machine answers the call and starts playing OGM, press **X**.

3) Enter the 4-digit Remote Access PIN (default PIN is **0000**).

4) Press the following keys to carry out your desired function.

key	Functions	
	While message is not playing	While message is playing
2		Delete the current message playback
4		Repeat playing the current message from the beginning. Press twice to skip backward to the previous message.
5		Stop the current message playback
6		Skip forward to play the next message
7	Turn on the answering machine	
9	Turn off the answering machine	
*	Enter the 4-digit remote access PIN	

NOTE: When your answering machine memory is full, the answer mode will change to ANSWER ONLY automatically.

It will change to ANS & RECORD mode automatically after some messages have been deleted.

You cannot delete new messages until they have been listened to.

ALARM FUNCTION

You have the choice to enter 10 Alarms.

In idle mode:

1) Press **MENU/OK**  and **▼/▲** to select **REMINDER**.

2) Press **MENU/OK**  and **▼/▲** to select your alarm.

3) Press **MENU/OK**  and ON/OFF to select ON.

4) Press **MENU/OK**  and enter the time.

5) Press **MENU/OK**  and choose the frequency.

6) Press **MENU/OK**  to save.

TALKING FUNCTION

You have the can choose to activate or deactivate the function Talking Digits.

Activate: this function announces the digit dial.

In idle mode:

1) Press **MENU/OK**  and **▼/▲** to select **TLK DIGITS**.

2) Press **MENU/OK**  and **▼/▲** to select **ON** or **OFF**.

3) Press **MENU/OK**  to save.

FUNCTION FIRST RING

Sometimes, the phone will ring once to inform us that we have a voice message on the line. To remove this ringer, please follow this

procedure.

In idle mode:

Press **MENU/OK**  , and **▼/▲** to select **BS SETTING**

Press **MENU/OK**  and **▼/▲** to select **FIRST RING**

Press **MENU/OK**  to select **ON**

Press **MENU/OK**  to save.

TECHNICAL SPECIFICATIONS

Basic Information	
Valid Range	Indoor : 50m / Outdoor:300m
Handset	Standby time: 100 hours
Operating time	Talk time : 10 hours approx.
RF Parameter	
Frequency	1.88 GHz to 1.9GHz
Nb Channels	10
RF power	< 250mW
Power Supply	
Base	Input 100-240V 50/60Hz; Output DC6V  0.6A, 3.6W adapter
Charger	Input 100-240V 50/60Hz; Output DC6V  0.45A, 2.7W adapter
Handset	3 batteries AAA 1.2V/600mAh rechargeable

MAINTENANCE

Clean the surface of the housing with a soft, fluff-free cloth. Do not use any cleaning agents or solvents.

GUARANTEE

From the moment your Geemarc AMPLIDECT595 U.L.E is purchased, Geemarc guarantee is for the period of two years. During this time, all repairs or replacements (at our discretion) are free of charge. Should you experience a problem then contact our help line or visit our website at www.geemarc.com.

The guarantee does not cover accidents, negligence or breakages to any parts. The product must not be tampered with or taken apart by anyone who is not an authorized Geemarc representative.

The Geemarc guarantee in no way limits your legal rights.

IMPORTANT: YOUR RECEIPT IS PART OF YOUR GUARANTEE AND MUST BE RETAINED AND PRODUCED IN THE EVENT OF A WARRANTY CLAIM.

Please note: The guarantee applies to the United Kingdom only.

DECLARATIONS:

UKCA Directives

Geemarc Telecom SA hereby declares that this AMPLIDECT595 U.L.E is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Directive 2014/53/UE.

The UKCA declaration of conformity may be consulted at www.geemarc.com

Recycling Directives

The WEEE (Waste Electrical and Electronic Equipment) has been put in place for the products at the end of their useful life are recycled in the best way.

When this product is finished with, please do not put it in your domestic waste bin. Please use one of the following disposal options:

- Remove the batteries and deposit them in an appropriate WEEE skip.

- Deposit the product in an appropriate WEEE skip.

- Or, hand the old product to the retailer. If you purchase a new one, they should accept it.

Thus if you respect these instructions you ensure human health and environmental protection.



For product support and help visit our website at www.geemarc.com

E-mail : help@geemarc.com

telephone **01707 387602**

lines are open 09h00 to 16h00 Mon to Fri

Parc de l'Etoile, 2 Rue Gaillée, 59760 Grande-Synthe, France

Manufacturer: Vtech (Dongguan) Telecommunications Limited.
Vtech Science Park, Xia Ling Bei Management Zone, Liaobu, Dongguan, Guangdong.

This product is made in China To Geemarc Telecom

QGAMPLIDECT595ULE_En_A3_V1.6